

APPLICATIONS

- Steam Tracing
- Drip Legs
- Automatic Air Vents
- Sterilizers
- Cooking Kettles
- Water Heaters
- Laundry Equipment
- Radiators
- Process Equipment
- Air Handlers

OPTIONS See page 9

- ST Sterilizer Trim (1/4 & 5/16 orifice sizes)
- SLR SLR Orifice
- S Internal Stainless Strainer
- ISO ISO Filled Actuator
- HC High Capacity

Canadian Registration # 0E0591.9

N125 SERIES **THERMOSTATIC STEAM TRAPS**

Pressures to 125 PSIG (8.75 barg) Temperatures to 400°F (204°C)

Superior Performance — Hardened valve and seats are lapped in matched sets, providing tight shutoff and long service life.

Improved Energy Savings — Maximum elimination of air and non-condensibles-trap closes at saturated steam temperature.

Temperature Sensitive Actuators — One moving part. Stainless Steel, fail open or fail closed, welded actuator for maximum corrosion, thermal and hydraulic shock resistance.

Freeze Proof — Threaded male union horizontal inlet and vertical outlet-self draining.

In-line Maintenance — Threaded cover for one step removal, inspection and service without breaking pipe connections.

Air Vent — Efficient steam service air vent when equipped with ISO Bellows and installed in air vent location.

Guaranteed — Guaranteed against defects in materials or workmanship for 3 years.

Models*

- N125 Standard capacity
- N125L Low capacity
- N125HC High capacity
- N125ST-FC Standard capacity w/sterilizer seat
- N125STHC-FC-High capacity w/sterlizer seat
- *Add (-FC) for fail closed or (-FO) for fail open to end of model number

OPERATION

Thermal actuator is filled at its free length with a liquid having a lower boiling point than water. On start-up, valve is normally open. When steam enters trap, thermal actuator fill vaporizes to a pressure higher than line pressure. This forces valve into seat orifice to prevent any further flow. As condensate collects, it takes heat from thermal actuator, lowering internal pressure. Line pressure will then compress thermal actuator to open valve and discharge condensate. Valve opening automatically adjusts to load conditions from minimum on very light loads to full lift at maximum load. Restricted orifice in N125L (small opening at bottom of valve seat) prevents trap from discharging continuously on light loads.

N125 SERIES **THERMOSTATIC** STEAM TRAPS

SPECIFICATION


Steam trap shall be of balanced pressure design with stainless steel welded actuator capable of discharging condensate within 10°F of saturated temperature. Where greater sensitivity is required, SLR orifice and Sterilizer trim will be available to allow condensate evacuation at or near saturated temperatures. Where subcooling of condensate is desired alternate thermostatic actuator will be available to allow condensate evacuation at or near 40°F below saturated temperatures. Thermostatic actuator shall employ a conical valve lapped in matched sets with the seat ring assuring tight shut off. A minimum of three orifice sizes shall be available allowing for custom capacity sizing. Trap shall be bronze bodied suitable for pressures through 125 psig and available in 3/8" through 3/4" NPT connections.

Maximum Operating Conditions

PMO: Max. Operating Pressure 125 psig (8.75 barg) TMO: Max. Operating Temperature 400°F (204°C) PMA: Max. Allowable Pressure 125 psig (8.75 barg) TMA: Max. Allowable Temperature 400°F (204°F)

MATERIALS OF CONSTRUCTION

| Body & Cover | ASTM B283 C37700 |
|--------------|------------------------------|
| Actuator | Welded Stainless Steel |
| Cover Gasket | Copper Jacketed |
| Valve & Seat | Hardened 416 Stainless Steel |

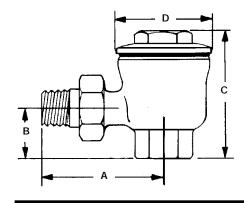

Connections: 3/8"-3/4" NPT

| Dimensions | | | | | | | | | |
|------------|-------------|-------------------------|-----------|---------------------------------------|--------------|--|--|--|--|
| Size | | Weight Ib | | | | | | | |
| Size | Α | В | С | D | (kg) | | | | |
| 3⁄8, 1⁄2 | 23/4 | 11% | 21/8 | 25/32 | 1.5 | | | | |
| | (70) | (29) | (73) | (54) | (.68) | | | | |
| 3/4 | 3¾6 (81) | 1% ₆ (40) | 3 (76) | ²⁵ / ₃₂ (54) | 1.8 (.82) | | | | |

| Maximum Capacity—lbs/hr 10°F Below Saturation (Kg/hr 5°C Below Saturation) | | | | | | | | |
|--|---------|--------------------------|-------|-------|--------|--------|--------|--|
| Trap | Orifice | Differential PSIG (barg) | | | | | | |
| | Inch | 5 | 10 | 20 | 50 | 100 | 125 | |
| | (mm) | (0.34) | (0.7) | (1.4) | (3.5) | (6.9) | (8.6) | |
| N125L | 1/8 | 216 | 265 | 375 | 592 | 778 | 838 | |
| | (3) | (98) | (120) | (170) | (269) | (354) | (383) | |
| N125 | 1/4 | 550 | 825 | 1210 | 1975 | 2825 | 3140 | |
| N125ST | (6) | (249) | (374) | (549) | (896) | (1281) | (1424) | |
| N125HC | 5/16 | 860 | 1220 | 1725 | 2725 | 3575 | 3850 | |
| N125STHC | (8) | (390) | (554) | (783) | (1237) | (1623) | (1748) | |

Nicholson recommends ISO filled Actuator for superheated steam.